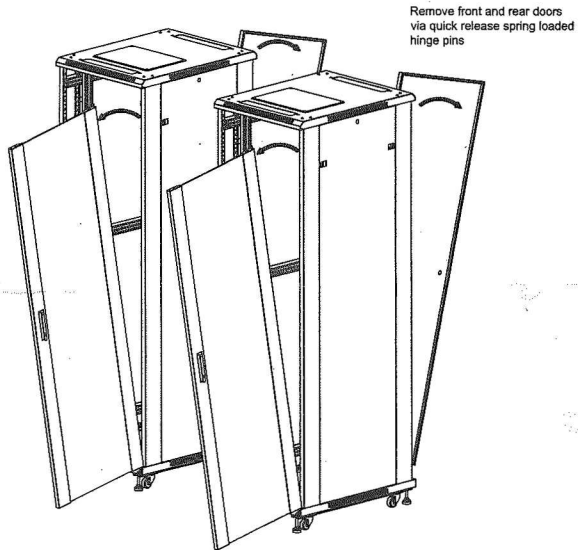## Kit Contents:

a
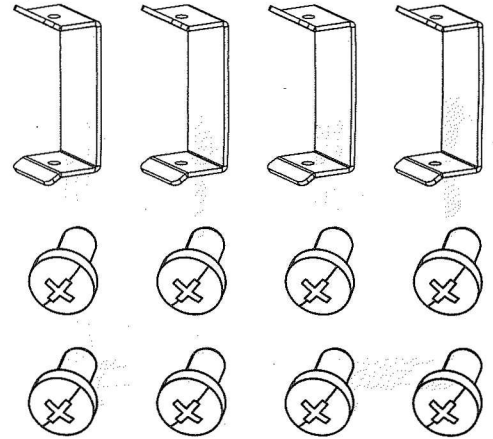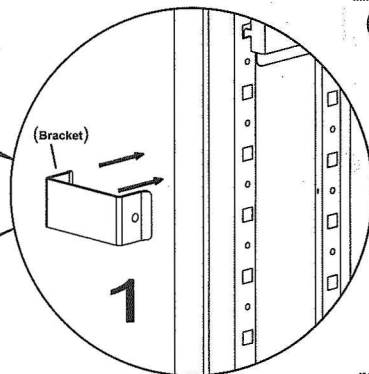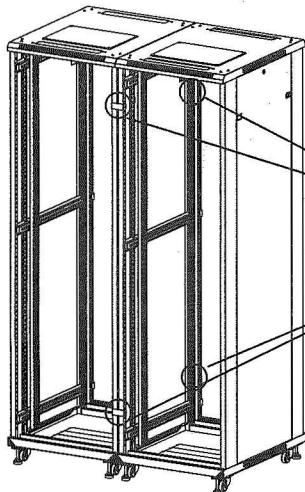
Remove front and rear doors via quick release spring loaded hinge pins

b

Move racks together until sides are touching.
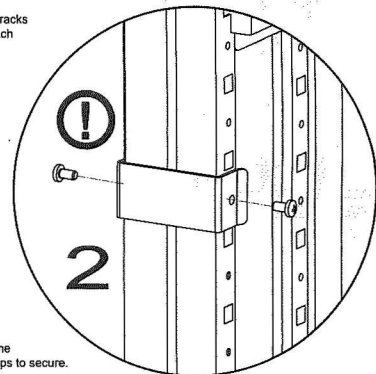

c

(Bracket)

1

IMPORTANT
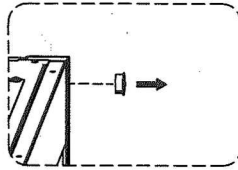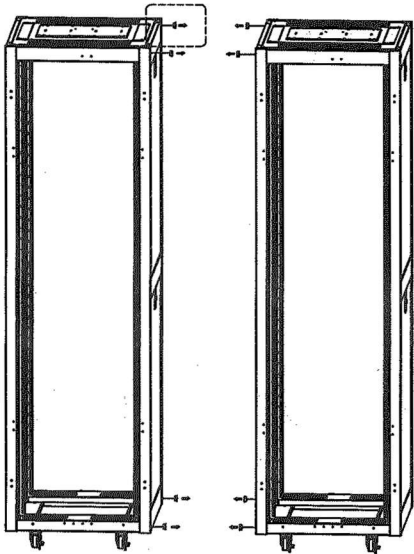Make sure both racks are level with each other.

2

Fit 4 (brackets) into frame slots. Press down on clips to secure.

IMPORTANT
Make sure all 4 bracket are fully engaged.
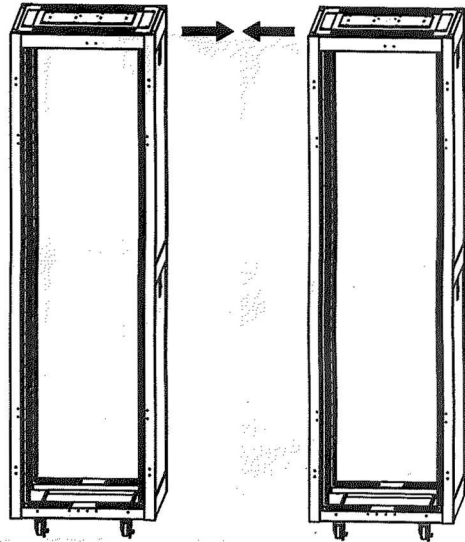Secure each bracket with two M5x10 self tapping screws

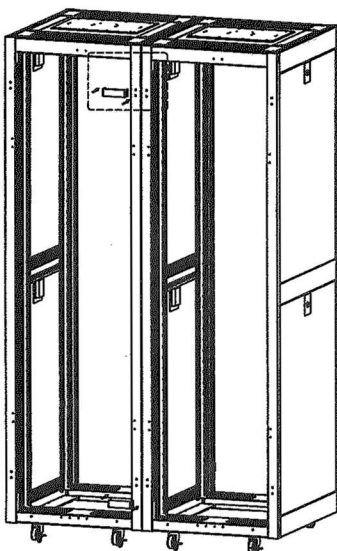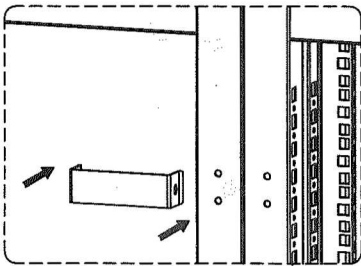Remove the plastic cover at top of rack side the rack (8 pcs).

Note:
Remove front and rear doors by opening and simply lifting of the hinge pin assembly!

⊂ ⊃ x 8   ①
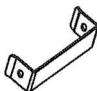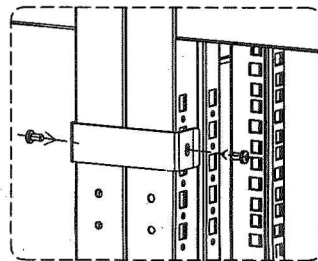
Move racks together until sides are touching

②

Fix the bracket to the top and bottom of the front and rear rack frame posts .
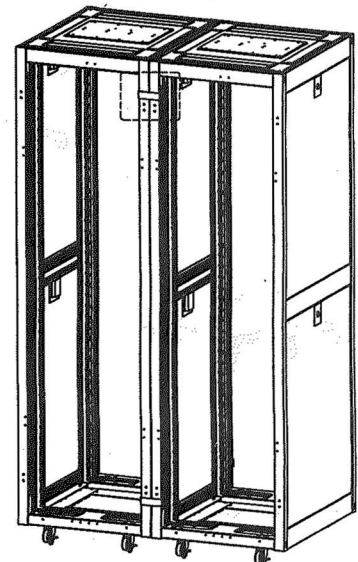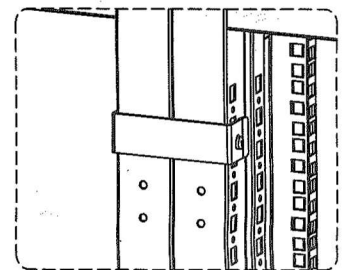
x 4   ③

Secure each bracket with two M5X10 Self-tapping screws

x 8   ④

Baying is Complete

⑤